


Upínač E2 pro vnitřní soustružnické nože

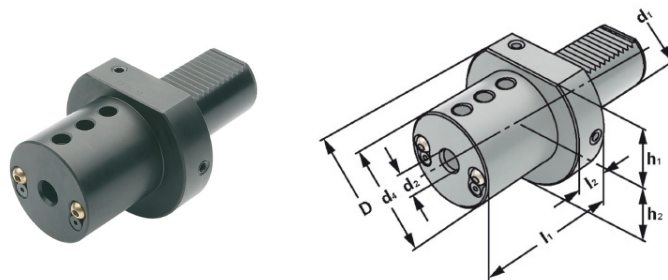

Název	d ₁	d ₂	D	d ₄	h ₁	h ₂	l ₁	l ₂
E2-16x06	16	6	40	32	18	20	44	13
E2-16x08	16	8	40	32	18	20	44	13
E2-16x10	16	10	40	32	18	20	44	13
E2-16x12	16	12	40	32	18	20	44	13
E2-16x16	16	16	40	32	18	20	44	13
E2-20x08	20	8	50	40	23	25	50	18
E2-20x10	20	10	50	40	23	25	50	18
E2-20x12	20	12	50	40	23	25	50	18
E2-20x16	20	16	50	40	23	25	50	18
E2-20x20	20	20	50	40	23	25	50	18
E2-25x08	25	8	58	40	25	25	50	18
E2-25x10	25	10	58	40	25	25	50	18
E2-25x12	25	12	58	40	25	25	50	18
E2-25x16	25	16	58	40	25	25	50	18
E2-25x20	25	20	58	58	25	25	50	-
E2-25x25	25	25	58	58	25	25	60	-
E2-30x08	30	8	68	55	28	30	60	22
E2-30x10	30	10	68	55	28	30	60	22
E2-30x12	30	12	68	55	28	30	60	22
E2-30x16	30	16	68	55	28	30	60	22
E2-30x20	30	20	68	55	28	30	60	22
E2-30x25	30	25	68	55	28	30	60	22
E2-30x32	30	32	68	68	28	30	75	-
E2-40x08	40	8	83	55	32,5	41,5	75	22
E2-40x10	40	10	83	55	32,5	41,5	75	22
E2-40x12	40	12	83	55	32,5	41,5	75	22
E2-40x16	40	16	83	55	32,5	41,5	75	22
E2-40x20	40	20	83	55	32,5	41,5	75	22
E2-40x25	40	25	83	55	32,5	41,5	75	22
E2-40x32	40	32	83	83	32,5	41,5	75	-
E2-40x40	40	40	83	83	32,5	41,5	90	-
E2-50x12	50	12	98	68	35	49	90	30
E2-50x16	50	16	98	68	35	49	90	30
E2-50x20	50	20	98	68	35	49	90	30
E2-50x25	50	25	98	68	35	49	90	30
E2-50x32	50	32	98	68	35	49	90	30
E2-50x40	50	40	98	98	35	49	90	-
E2-50x50	50	50	98	98	35	49	100	-

provedení: s nastavitelnými tryskami chlazení nástroje