



Upínač pro frézy se závitem

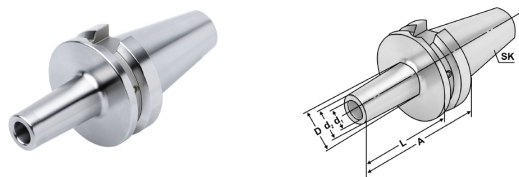

Název	Kužel	M	D	d ₂	d ₁	L	A		G 2,5 25.000 min ⁻¹
BT40.52.M.06.ADB	BT40	6	13	10	6,5	25	52	AD/B	•
BT40.77.M.06.ADB	BT40	6	20	10	6,5	50	77	AD/B	•
BT40.102.M.06.ADB	BT40	6	23	10	6,5	75	102	AD/B	•
BT40.52.M.08.ADB	BT40	8	15	13	8,5	25	52	AD/B	•
BT40.77.M.08.ADB	BT40	8	23	13	8,5	50	77	AD/B	•
BT40.102.M.08.ADB	BT40	8	23	13	8,5	75	102	AD/B	•
BT40.127.M.08.ADB	BT40	8	25	13	8,5	100	127	AD/B	•
BT40.52.M.10.ADB	BT40	10	20	18	10,5	25	52	AD/B	•
BT40.77.M.10.ADB	BT40	10	23	18	10,5	50	77	AD/B	•
BT40.102.M.10.ADB	BT40	10	28	18	10,5	75	102	AD/B	•
BT40.127.M.10.ADB	BT40	10	32	18	10,5	100	127	AD/B	•
BT40.52.M.12.ADB	BT40	12	24	21	12,5	25	52	AD/B	•
BT40.77.M.12.ADB	BT40	12	24	21	12,5	50	77	AD/B	•
BT40.102.M.12.ADB	BT40	12	31	21	12,5	75	102	AD/B	•
BT40.127.M.12.ADB	BT40	12	33	21	12,5	100	127	AD/B	•
BT40.152.M.12.ADB	BT40	12	36	21	12,5	125	152	AD/B	•
BT40.52.M.16.ADB	BT40	16	29	29	17	25	52	AD/B	•
BT40.77.M.16.ADB	BT40	16	34	29	17	50	77	AD/B	•
BT40.102.M.16.ADB	BT40	16	34	29	17	75	102	AD/B	•
BT40.127.M.16.ADB	BT40	16	36	29	17	100	127	AD/B	•
BT40.152.M.16.ADB	BT40	16	40	29	17	125	152	AD/B	•
BT40.177.M.16.ADB	BT40	16	42	29	17	150	177	AD/B	•
BT50.88.M.08.ADB	BT50	8	23	13	8,5	50	88	AD/B	•
BT50.138.M.08.ADB	BT50	8	25	13	8,5	100	138	AD/B	•
BT50.188.M.08.ADB	BT50	8	30	13	8,5	150	188	AD/B	•
BT50.88.M.10.ADB	BT50	10	23	18	10,5	50	88	AD/B	•
BT50.138.M.10.ADB	BT50	10	32	18	10,5	100	138	AD/B	•
BT50.188.M.10.ADB	BT50	10	37	18	10,5	150	188	AD/B	•
BT50.88.M.12.ADB	BT50	12	24	21	12,5	50	88	AD/B	•
BT50.138.M.12.ADB	BT50	12	33	21	12,5	100	138	AD/B	•
BT50.188.M.12.ADB	BT50	12	40	21	12,5	150	188	AD/B	•
BT50.88.M.16.ADB	BT50	16	34	29	17	50	88	AD/B	•
BT50.113.M.16.ADB	BT50	16	36	29	17	75	113	AD/B	•
BT50.138.M.16.ADB	BT50	16	36	29	17	100	138	AD/B	•
BT50.188.M.16.ADB	BT50	16	43	29	17	150	188	AD/B	•

Doporučené utahovací momenty

M6	10 Nm
M8	25 Nm
M10	40 Nm
M12	50 Nm
M16	60 Nm